


Installation Instruction of Single Extension Concealed Slide

Loading Capacity: 20 KG




Side Board Thickness of drawer: ≤ 16 mm or 19mm

Cabinet Drawing I

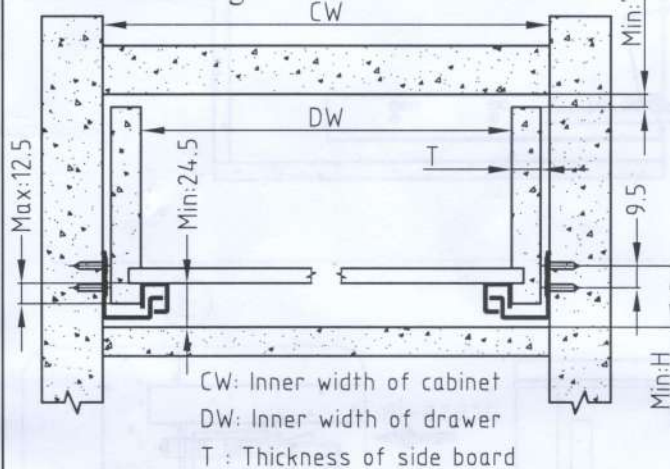


T	DW	For example	Min:H
≤ 16	$= CW - 42_{-1.5}^0$	CW=564 and DW=522~523.5	34
19	$= CW - 48_{-1.5}^0$	CW=564 and DW=516~517.5	31

Cabinet Drawing II


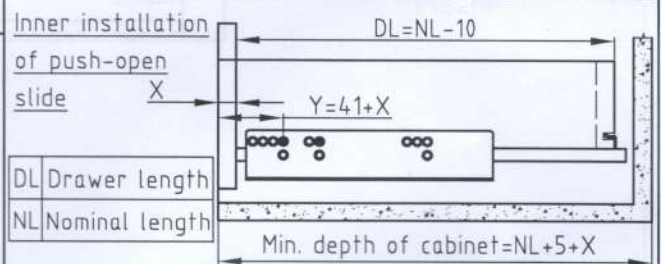
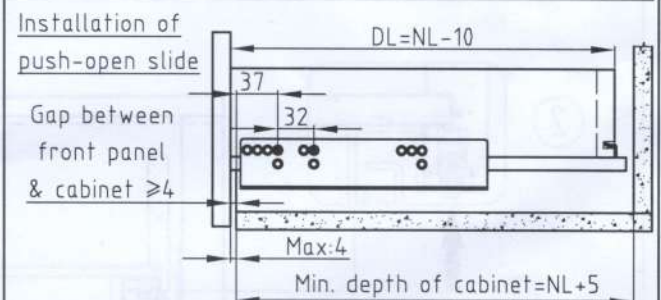
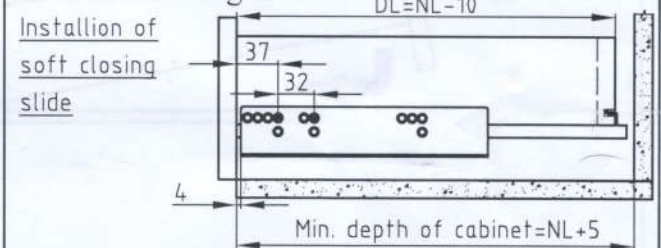


Installation of Hole Position





Notes: • suggested hole position

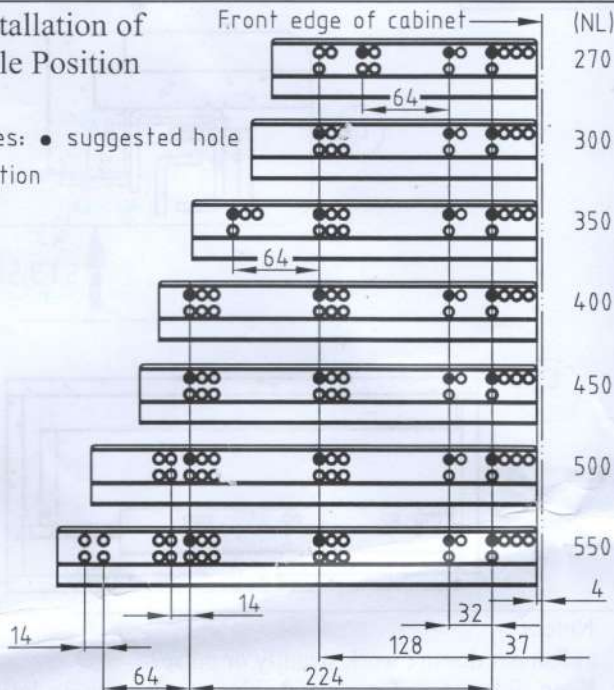





Tools

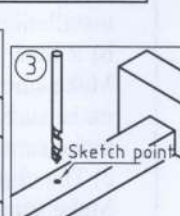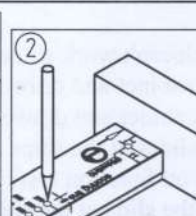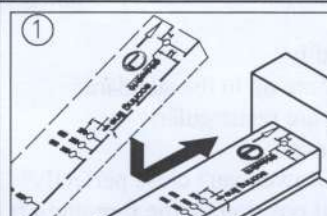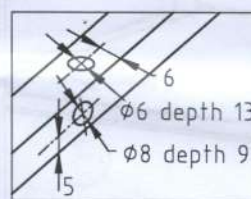





NL	X ₁ (mm)	X ₂ (mm)
270	205	251
300	230	251
350	275	255
400	300	280
450	335	315
500	360	340
550	405	385

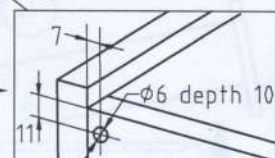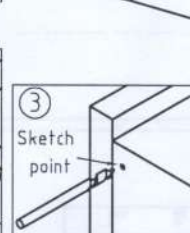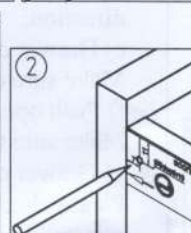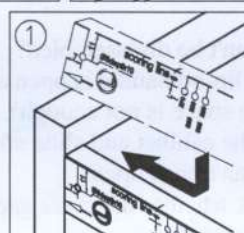

Drawer Installation

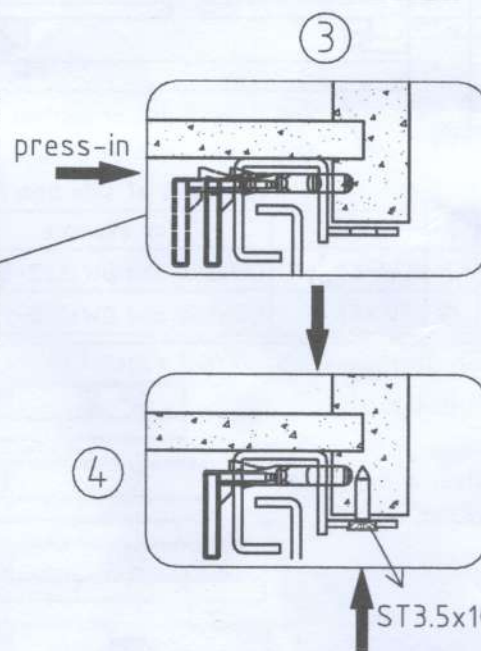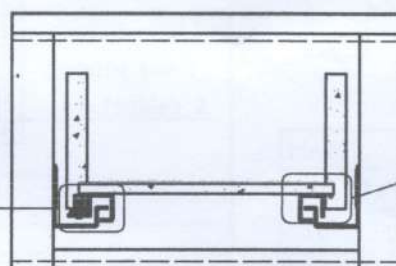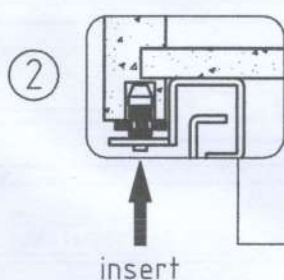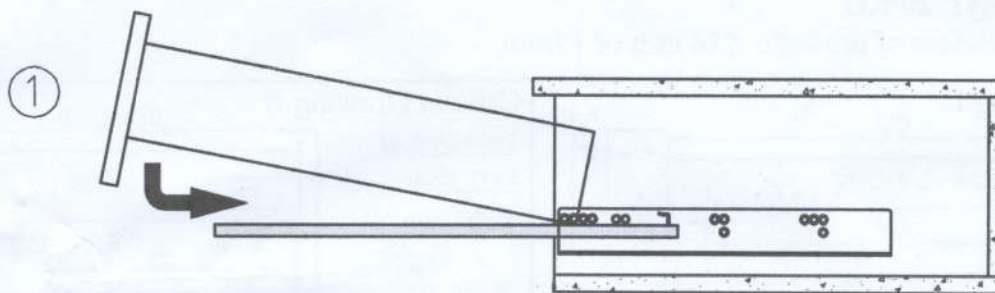

Disassembling

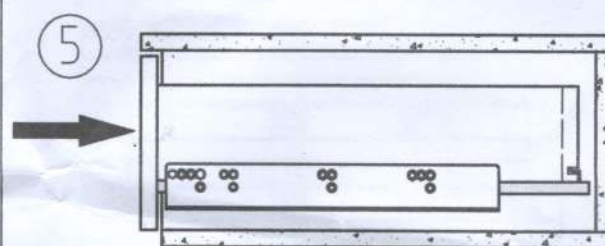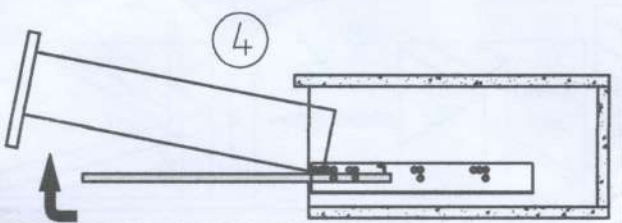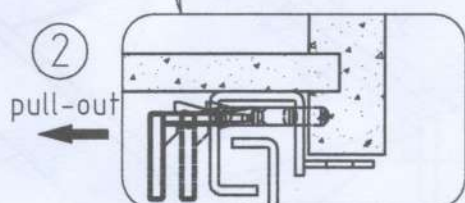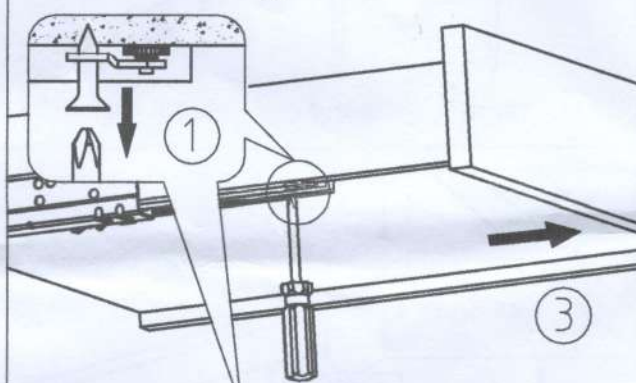

Notes:

a) Runner doesn't work steadily or pulse?
Keep slides away from wood chips or other scraps during installation.

b) Runner doesn't work smoothly?
Make sure cabinet and drawer are up to the standard;
make sure cabinet and drawer are rectangular;
make sure slides at the same level;

c) The clip-on function lost? Drawer can't close perfectly?
Make sure the slide at the right position on the fore-and-aft direction;

e) Drawer can't be disassembled?

Make sure clip-on handle is open and locking pin is pull out.

※ f) Push open space is not enough?

Make sure the cabinet and slide are horizontal.

※ g) Drawer can't push open?

Please check whether the press gap is less than 4mm. If yes, pls reinstall the slide .

Notes: ※ for push-open concealed slide only.